MITSUBISHI ELECTRIC

General-Purpose AC Servo

MITSUBISHI SERVO AMPLIFIERS & MOTORS

MELSERVO-J4

MR-J4 Servo amplifier

MR-J4-10_ to MR-J4-22K_
MR-J4W2-22B to MR-J4W2-1010B
MR-J4W3-222B and MR-J4W3-444B

Instructions and Cautions for Safe Use of AC Servos

J

Country/Region	Sales office	Tel/Fax
USA	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway, Vernon Hills, IL 60061, USA	Tel :+1-847-478-2100 Fax :+1-847-478-0327
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8, D-40880 Ratingen, Germany	Tel :+49-2102-486-0 Fax :+49-2102-486-1120
Italy	Mitsubishi Electric Europe B.V. Italian Branch Viale Colleoni 7 1-20041 Agrate Brianza (Milano), Italy	Tel :+39-39-60531 Fax :+39-39-6053312
China	Mitsubishi Electric Automation (China) Ltd. 4F Zhi Fu Plazz, No. 80 Xin Chang Road Shanghai 200003, China	Tel :+86-21-6120-0808 Fax :+86-21-6121-2444
Taiwan	Setsuyo Enterprise Co., Ltd. 6F, No.105 Wu-Kung 3rd Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan	Tel :+886-2-2299-2499 Fax :+886-2-2299-2509
Korea	Mitsubishi Electric Automation Korea Co., Ltd. 3F, 1480-6, Gayang-dong, Gangseo-gu, Seoul 157-200, Korea	Tel :+82-2-3660-9552 Fax :+82-2-3664-8372
Singapore	Mitsubishi Electric Asia Pte, Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building Singapore 159943	Tel :+65-6470-2460 Fax :+65-6476-7439

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BLDG MARUNOUCHI TOKYO 100-8310

IB(NA)0300175-J(1309)MEE Printed in Japan

This guide uses recycled paper.
Specifications are subject to change without notice.

Copyright©2012 Mitsubishi Electric Corporation All Right Reserved.

Contents of the package

Unpack the product and check the rating plate to see if the servo motor is as you ordered.

Contents	Quantity
Servo amplifier	1
MELSERVO-J4 Series Instructions and Cautions for Safe Use of AC Servos (This guide)	1

Rating plate

The following shows an example of rating plate for explanation of each item.



Warning plate

Model

The following describes what each block of a model name indicates. Not all combinations of the symbols are available.

MR－J 4 W2－ 2 2B－

Series

Number of axes

Symbol	Number of axes
	1
W2	2
W3	3

Rated output

Symbol	Rated output [kW]
10	0.1
20	0.2
40	0.4
60	0.6
70	0.75
100	1
200	2
350	3.5
500	5
700	7
11K	11
15K	15
22K	22

Software special specification
Blank, Sn, or Un
(n = 00 to 999)

Hardware special specification
Blank or 2 to 5 digit alphanumeric
(RJ, ED, PX, RU, RZ, etc.)

Corresponding

Symbol	Corresponding
A	General-purpose interface
B	SSCNET III/H

Rated output [kW]

Symbol	A-axis	B-axis	C-axis
22	0.2	0.2	
44	0.4	0.4	
77	0.75	0.75	
1010	1	1	
222	0.2	0.2	0.2
444	0.4	0.4	0.4

1.About the manuals

1.1 MELSERVO MR-J4 relevant manuals

This installation guide explains how to mount MR-J4 servo amplifiers. You can also check it with our website for free. http://www.mitsubishielectric.com/fa/

If you have any questions about the operation or programming of the equipment described in this guide, contact your local sales office.

In addition, when you mount a protective device, specific technical skills which are not detailed in the guide will be required.

1.2 Purpose of this guide

This installation guide explains the safe operation of MR-J4 servo amplifiers for engineers of machinery manufacturers and machine operators. This installation guide does not explain how to operate machines in which safe servo system is, or will be integrated. For detailed information of the products, refer to each servo amplifier instruction manual.

1.3 Terms related to safety

1.3.1 IEC 61800-5-2 Stop function

STO function (Refer to IEC 61800-5-2:2007 4.2.2.2 STO.) The MR-J4 servo amplifiers have the STO function. The STO function shuts down energy to servo motors, thus removing torque. This function electronically cuts off power supply in the servo amplifier.

2. About safety

This chapter explains safety of users and machine operators. Please read the chapter carefully before mounting the equipment. In this installation guide, the specific warnings and cautions levels are classified as follows.

⚠WARNING	Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.
⚠CAUTION	Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight injury to personnel or may cause physical damage.

2.1 Professional engineer

Only professional engineers should mount MR-J4 servo amplifiers.

Here, professional engineers should meet the all conditions below.

(1) Persons who took a proper engineering training or qualified persons who are engaged in electrical equipment
Please note if you can take a proper engineering training at your local Mitsubishi Electric office. Contact your local sales office for schedules and locations.

(2) Persons who can access to operating manuals for the protective devices (e.g. light curtain) connected to the safety control system. A person who have read and familiarized himself/herself with the manuals.

2.2 Applications of the devices

MR-J4 servo amplifiers comply with the following safety standards.

ISO/EN ISO 13849-1 Category 3 PL d, IEC/EN 62061 SIL CL 2, IEC/EN 61800-5-2 SIL 2 (STO), IEC/EN 61800-5-1, IEC/EN 61800-3, IEC/EN 60204-1

In addition, MR-J4 servo amplifiers can be used with the MR-J3-D05 safety logic unit or safety PLCs.

2.3 Correct use

Always use the MR-J4 servo amplifiers within specifications (voltage, temperature, etc. Refer to each instruction manual for details.). Mitsubishi Electric Co. accepts no claims for liability if the equipment is used in any other way or if modifications are made to the device, even in the context of mounting and installation.

⚠WARNING ●It takes 15 minutes for capacitor discharging. Do not touch the unit and terminals immediately after power off.

2.3.1 Peripheral device and power wiring

The followings are selected based on IEC/EN 61800-5-1, UL 508C, and CSA C22.2 No.14.

(1) Local wiring and crimping tool
Use only copper wires rated at 75 °C for wiring. The following table shows the wire sizes [AWG] and the crimp terminal symbols rated at 75 °C.

Servo amplifier	Wire [AWG] (Note 2)			
	L1/L2/L3 ⏚	L11/L21	P+/C	U/V/W/⏚ (Note 3)
MR-J4-10_/MR-J4-20_/MR-J4-40_/MR-J4-60_/MR-J4-70_/MR-J4-100_/MR-J4-200_	14	14	14	14
MR-J4-350_	12	14: c	14	12
MR-J4-500_ (Note 1)	10: a		14: c	8: b
MR-J4-700_ (Note 1)	8: b		12: a	
MR-J4-11K_ (Note 1)	6: d		12: e	4: f
MR-J4-15K_ (Note 1)	4: f		10: d	2: g
MR-J4-22K_ (Note 1)	1/0: h		10: f	2/0: j
MR-J4W_-_B	14 (Note 4)	14	14	14

Note 1. To connect these models to a terminal block, be sure to use the screws that come with the terminal block.
2. Alphabets in the table indicate crimping tools. Refer to the following table for the crimp terminals and crimping tools.
3. Select wire sizes depending on the rated output of the servo motors. The values in the table are sizes based on rated output of the servo amplifiers.
4. Use the crimp terminal c for the PE terminal of the servo amplifier.

Table: Recommended crimp terminals

Symbol	Crimp terminal (Note 2)	Servo amplifier-side crimp terminals			Manufacturer
		Applicable tool			
		Body	Head	Dice	
a	FVD5.5-4	YNT-1210S			JST
b (Note 1)	8-4NS	YHT-8S			
c	FVD2-4	YNT-1614			
d	FVD14-6	YF-1	YNE-38	DH-122 • DH-112	
e	FVD5.5-6	YNT-1210S			
f	FVD22-6	YF-1	YNE-38	DH-123 • DH-113	
g	FVD38-6	YF-1	YNE-38	DH-124 • DH-114	
h	R60-8	YF-1	YET-60-1	TD-125 • TD-113	
i	FVD5.5-8	YNT-1210S			
j	CB70-S8	YF-1	YET-150-1	TD-226 • TD-213	

Note 1. Coat the crimping part with an insulation tube.
2. Some crimp terminals may not be mounted depending on the size. Make sure to use the recommended ones or equivalent ones.

(2) Selection example of MCCB and fuse
When a servo amplifier is protected by T class fuses or circuit breaker having an interrupting rating not less than 300 A effective value and 240 V maximum, use T class fuses or molded-case circuit breaker (UL489 Listed MCCB) as the following table. The T class fuses and molded-case circuit breakers in the table are selected examples based on rated I/O of the servo amplifiers. When you select a smaller capacity servo motor to connect it to the servo amplifier, you can also use smaller capacity T class fuses or molded-case circuit breaker than ones in the table. For selecting ones other than Class T fuses and molded-case circuit breakers below, refer to each servo amplifier instruction manual.

Servo amplifier	Molded-case circuit breaker (240 V AC)	Fuse (300 V)
MR-J4-10_/MR-J4-20_/MR-J4-40_/MR-J4-60_/MR-J4-70_/MR-J4W2-22B	NF50-SVFU-5A (50 A frame 5 A)	10 A
MR-J4-60_(Note)/MR-J4-70_(Note)/MR-J4-100_/MR-J4W2-22B (Note)/ MR-J4W2-44B/MR-J4W2-77B/MR-J4W3-222B/MR-J4W3-444B	NF50-SVFU-10A (50 A frame 10 A)	15 A
MR-J4-200_/MR-J4W2-44B (Note)/MR-J4W2-1010B	NF50-SVFU-15A (50 A frame 15 A)	30 A
MR-J4-350_/MR-J4W2-77B (Note)/MR-J4W3-444B (Note)	NF50-SVFU-20A (50 A frame 20 A)	40 A
MR-J4-500_	NF50-SVFU-30A (50 A frame 30 A)	60 A
MR-J4-700_	NF50-SVFU-40A (50 A frame 40 A)	80 A
MR-J4-11K_	NF100-CVFU-80A (100 A frame 80 A)	125 A
MR-J4-15K_	NF100-CVFU-80A (100 A frame 80 A)	150 A
MR-J4-22K_	NF225-CWU-125A (225 A frame 125 A)	300 A

Note. For 1-phase 200 V AC power input

(3) Power supply
This servo amplifier can be supplied from star-connected supply with grounded neutral point of overvoltage category III set forth in IEC/EN 60664-1. However, when you use the neutral point for single phase supply, a reinforced insulating transformer is required in the power input section. For the interface power supply, use an external 24 V DC power supply with reinforced insulation on I/O terminals.

(4) Grounding
To prevent an electric shock, always connect the protective earth (PE) terminal (marked ⏚) of the servo amplifier to the protective earth (PE) of the cabinet. Do not connect two grounding cables to the same protective earth (PE) terminal. Always connect cables to the terminals one-to-one.
If using a leakage circuit breaker, always ground the protective earth (PE) terminal of the servo amplifier to prevent an electric shock. Only an RCD (earth-leakage current breaker) of type B can be used for the power supply side of the product.



2.3.2 EU compliance

The MR-J4 servo amplifiers are designed to comply with the following directions to meet requirements for mounting, using, and periodic technical inspections: Machinery directive (2006/42/EC), EMC directive (2004/108/EC), and Low-voltage directive (2006/95/EC).

(1) EMC requirement
MR-J4 servo amplifiers comply with category C3 in accordance with EN 61800-3. As for I/O wires (max. length 10 m. However, 3 m for STO cable for CN8.) and encoder cables (max. length 50 m), connect them to a shielded grounding. Use a EMC filter and surge protector on the primary side. The following shows recommended products.
EMC filter: Soshin Electric HF3000A-UN series
Surge protector: Okaya Electric Industries RSPD-250-U4 series
- MR-J4 Series are not intended to be used on a low-voltage public network which supplies domestic premises;
- radio frequency interference is expected if used on such a network.

The installer shall provide a guide for Installation and use, including recommended mitigation devices.

(2) For Declaration of Conformity (DoC)
Hereby, MITSUBISHI ELECTRIC EUROPE B.V., declares that the servo amplifiers are in compliance with the necessary requirements and standards (2006/42/EC, 2004/108/EC and 2006/95/EC). For the copy of Declaration of Conformity, contact your local sales office.

2.3.3 USA/Canada compliance

This servo amplifier is designed in compliance with UL 508C and CSA C22.2 No.14.

(1) Installation
The minimum cabinet size is 150% of each MR-J4 servo amplifier's volume. Also, design the cabinet so that the ambient temperature in the cabinet is 55 °C or less. The servo amplifier must be installed in the metal cabinet. For environment, the units should be used in open type (UL 50) and overvoltage category III or lower. The servo amplifier needs to be installed at or below of pollution degree 2. For connection, use copper wires.

(2) Short-circuit current rating (SCCR)
Suitable For Use On A Circuit Capable Of Delivering Not More Than 100 kA rms Symmetrical Amperes, 500 Volts Maximum.

(3) Overload protection characteristics
The MR-J4 servo amplifiers have solid-state servo motor overload protection. (It is set on the basis (full load current) of 120% rated current of the servo amplifier.)

(4) Over-temperature protection for motor
Motor Over temperature sensing is not provided by the drive.

(5) Capacitor discharge
It takes 15 minutes for capacitor discharging. Do not touch the unit and terminals immediately after power off.

(6) Branch circuit protection
For installation in United States, branch circuit protection must be provided, in accordance with the National Electrical Code and any applicable local codes.
For installation in Canada, branch circuit protection must be provided, in accordance with the Canada Electrical Code and any applicable provincial codes.

2.3.4 South Korea compliance

This product complies with the Radio Wave Law (KC mark). However, some applications are being processed. For the situation of compliance, contact your local sales office. Please note the following to use the product.
이 기기는 업무용 (A급) 전자파적합기기로서 판 매자 또는 사용자는 이 점을 주의하시기 바라며 , 가정외의 지역에서 사용하는 것을 목적으 로 합니다.
(The product is for business use (Class A) and meets the electromagnetic compatibility requirements. The seller and the user must note the above point, and use the product in a place except for home. In addition, use an EMC filter, surge protector, ferrite core, and line noise filter on the primary side for inputs. Use a ferrite core and line noise filter for outputs. Use a distance greater than 30 m between the product and third party sensitive radio communications for an MR-J4-22K_.)

2.4 General cautions for safety protection and protective measures

Observe the following items to ensure proper use of the MELSERVO MR-J4 servo amplifiers.

(1) For safety components and installing systems, only qualified personnel and professional engineers should perform.

(2) When mounting, installing, and using the MELSERVO MR-J4 servo amplifier, always observe standards and directives applicable in the country.

(3) The item about noises of the test notices in the manuals should be observed.

2.5 Residual risk

(1) Be sure that all safety related switches, relays, sensors, etc., meet the required safety standards.

(2) Perform all risk assessments and safety level certification to the machine or the system as a whole.

(3) If the upper and lower power module in the servo amplifier are shorted and damaged simultaneously, the servo motor may make a half revolution at a maximum.

(4) Only qualified personnel are authorized to install, start-up, repair or service the machines in which these components are installed. Only trained engineers should install and operate the equipment. (ISO 13849-1 Table F.1 No.5)

(5) Separate the wiring for safety function from other signal wirings. (ISO 13849-1 Table F.1 No.1)

(6) Protect the cables with appropriate ways (routing them in a cabinet, using a cable guard, etc.).

(7) Keep the required clearance/creepage distance depending on voltage you use.

2.6 Disposal

Disposal of unusable or irreparable devices should always occur in accordance with the applicable country-specific waste disposal regulations. (Example: European Waste 16 02 14)

2.7 Lithium battery transportation

To transport lithium batteries, take actions to comply with the instructions and regulations such as the United Nations (UN), the International Civil Aviation Organization (ICAO), and the International Maritime Organization (IMO).
The battery options (MR-BAT6V1SET and MR-BAT6V1) are assembled batteries from two batteries (lithium metal battery CR17335A) which are not subject to the dangerous goods (Class 9) of the UN Recommendations.

3. Mounting/dismounting

Installation direction and clearances

⚠CAUTION
●The devices must be installed in the specified direction. Not doing so may cause a malfunction.
●Mount the servo amplifier on a cabinet which meets IP54 in the correct vertical direction to maintain pollution degree 2.
●Note the followings for supplied regenerative resistors of 11 kW to 22 kW servo amplifiers because they do not have protect covers.
• Touching the resistor will cause a burn because the surface of the parts is a resistive element and very high temperature.
• Even if the power turned off, touching the resistor will cause an electric shock because the capacitor of the servo amplifier is charged for a while.

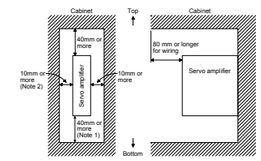

Note 1. For 11 kW to 22 kW servo amplifiers, the clearance between the bottom and ground will be 120 mm or more.
2. For MR-J4-500_, the clearance on the left side will be 25 mm or more.

4. Electrical Installation and configuration diagram

⚠WARNING ●Turn off the molded-case circuit breaker (MCCB) to avoid electrical shocks or damages to the product before starting the installation or wiring.

⚠CAUTION
●The installation complies with IEC/EN 60204-1. The voltage supply to machines must be 20 ms of immunity to instantaneous power failures as specified in IEC/EN 60204-1.
●Connecting a servo motor for different axis to U, V, W, or CN2_ of the servo amplifier may cause a malfunction.

The following shows representative configuration examples to conform to the IEC/EN/UL/CSA standards.

(1) 3-phase input for MR-J4 1-axis servo amplifier

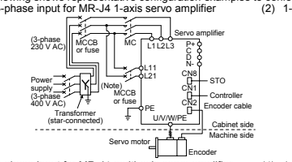

(2) 1-phase input for MR-J4 1-axis servo amplifier

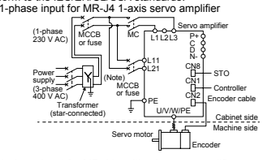

(3) 3-phase input for MR-J4 multi-axis servo amplifier

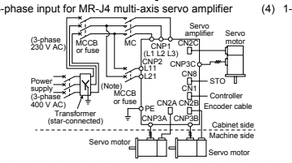

(4) 1-phase input for MR-J4 multi-axis servo amplifier

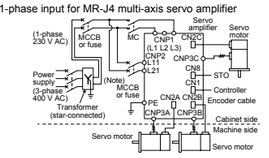

Note. When the wire sizes of L1 and L11 are the same, MCCB or fuse is not required.

The control circuit connectors described by rectangles are safely separated from the main circuits described by circles. The control motors will be limited to the following.

(1) HG/HF/HC/HA series servo motors (Mfg.: Mitsubishi Electric)

(2) Using a servo motor complied with IEC60034-1 and Mitsubishi Electric encoder (OBA, OSA)

5. Signals

5.1 Signal

The following shows MR-J4-10B signals as a typical example. For other servo amplifiers, refer to each servo amplifier instruction manual.

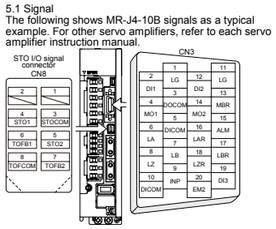

5.2 I/O device

Input device

Symbol	Device	Connector	Pin No.
EM2	Forced stop 2	CN3	20
STOCOM	Common terminal for input signals STO1/STO2	CN8	3
STO1	STO1 state input		4
STO2	STO2 state input		5

Output device

Symbol	Device	Connector	Pin No.
TOFCOM	Common terminal for monitor output signal in STO state	CN8	8
TOFB1	Monitor output signal in STO1 state		6
TOFB2	Monitor output signal in STO2 state		7

Power supply

Symbol	Device	Connector	Pin No.
DICOM	Digital I/F power supply input	CN3	5, 10
DOCOM	Digital I/F common		3
SD	Shield		Plate

6. Maintenance and service

⚠WARNING ●To avoid an electric shock, only qualified personnel should attempt inspections. For repair and parts replacement, contact your local sales office.

⚠CAUTION
●Do not perform insulation resistance test on the servo amplifier. Otherwise, it may cause a malfunction.
●Do not disassemble and/or repair the equipment on customer side.

6.1 Inspection items

It is recommended that the following points periodically be checked.

(1) Check for loose terminal block screws. Retighten any loose screws.

Servo amplifier	Tightening torque [N·m]											
	L1	L2	L3	N-	P3	P4	P+	C	D	L11	L21	U	V	W	PE
MR-J4-10_/MR-J4-20_/MR-J4-40_/MR-J4-60_/MR-J4-70_/MR-J4-100_/MR-J4-200_/MR-J4-350_															1.2
MR-J4-500_	1.2									0.8		1.2			
MR-J4-700_	1.2									0.8		1.2			
MR-J4-11K_/MR-J4-15K_	3.0									1.2		3.0			
MR-J4-22K_	6.0									1.2		6.0			
MR-J4W_-_B															1.2

(2) Servo motor bearings, brake section, etc. for unusual noise.
(3) Check the cables and the like for scratches or cracks. Perform periodic inspection according to operating conditions.
(4) Check that the connectors are securely connected to the servo motor.
(5) Check that the wires are not coming out from the connector.
(6) Check for dust accumulation on the servo amplifier.
(7) Check for unusual noise generated from the servo amplifier.
(8) Check the servo motor shaft and coupling for connection.

6.2 Parts having service lives

Service lives of the following parts are listed below. However, the service lives vary depending on operation and environment. If any fault is found in the parts, they must be replaced immediately regardless of their service lives. For parts replacement, please contact your local sales office.

Part name			Life guideline (Note 4) 10 years
Smoothing capacitor			Number of power-on, forced stop and controller forced stop times: 100 000 times Number of on and off for STO: 1,000,000 times
Relay			
Cooling fan			10,000 hours to 30,000 hours (2 years to 3 years)
Battery backup time	(Note 1) MR-J4 1-axis servo amplifier	Rotary servo motor	Approximately 20,000 hours (equipment power supply: off, ambient temperature: 20 °C) Approximately 29,000 hours (power-on time ratio: 25%, ambient temperature: 20 °C) (Note 5)
		Direct drive motor	Approximately 5,000 hours (equipment power supply: off, ambient temperature: 20 °C) Approximately 15,000 hours (power-on time ratio: 25%, ambient temperature: 20 °C) (Note 5)
	(Note 2) MR-J4 multi-axis servo amplifier	Rotary servo motor	Approximately 40,000 hours/2 axes, 30,000 hours/3 axes, or 10,000 hours/8 axes (equipment power supply: off, ambient temperature: 20 °C) Approximately 55,000 hours/2 axes, 38,000 hours/3 axes, or 15,000 hours/8 axes (power-on time ratio: 25%, ambient temperature: 20 °C) (Note 5)
		Direct drive motor	Approximately 10,000 hours/2 axes, 7,000 hours/3 axes, or 5,000 hours/4 axes (equipment power supply: off, ambient temperature: 20 °C) Approximately 15,000 hours/2 axes, 13,000 hours/3 axes, or 10,000 hours/4 axes (power-on time ratio: 25%, ambient temperature: 20 °C) (Note 5)
(Note 3) Battery life			5 years from date of manufacture

Note 1. The data-holding time by the battery using MR-BAT6V1SET. Replace the batteries within three years since the operation start whether the power supply of the servo amplifier is on/off. If the battery is used out of specification, [AL. 25 Absolute position erased] may occur. For other batteries, refer to each servo amplifier instruction manual.
2. The data-holding time by the battery using five MR-BAT6V1s. Replace the batteries within three years since the operation start whether the power supply of the servo amplifier is on/off. If the battery is used out of specification, [AL. 25 Absolute position erased] may occur. For other batteries, refer to each servo amplifier instruction manual.
3. Quality of the batteries degrades by the storage condition. The battery life is 5 years from the production date regardless of the connection status.
4. The characteristic of smoothing capacitor is deteriorated due to ripple currents, etc. The life of the capacitor greatly depends on ambient temperature and operating conditions. The capacitor will reach the end of its life in 10 years of continuous operation in normal air-conditioned environment (40 °C surrounding air temperature or less).
5. The power-on time ratio 25% is equivalent to 8 hours power on for a weekday and off for a weekend.

7. Transportation and storage

⚠CAUTION
●Transport the products correctly according to their mass.
●Stacking in excess of the limited number of product packages is not allowed.

⚠CAUTION
●Do not hold the front cover to transport the servo amplifier. Otherwise, it may drop.
●Install the servo amplifier and servo motor in a load-bearing place in accordance with the Instruction Manual.
●Do not get on or put heavy load on the equipment.
●For detailed information on the option battery's transportation and handing refer to the instruction manual.

When you keep or use it, please fulfill the following environment.

Item			Environment
Ambient temperature	Operation	[°C]	0 to 55 Class 3K3 (IEC/EN 60721-3-3)
	Transportation (Note)	[°C]	-20 to 65 Class 2K4 (IEC/EN 60721-3-2)
	Storage (Note)	[°C]	-20 to 65 Class 1K4 (IEC/EN 60721-3-1)
Ambient humidity	Operation, transportation, storage		5 %RH to 90 %RH
Vibration load	Test values		10 Hz to 57 Hz with constant deviation of 0.075 mm 57 Hz to 150 Hz with constant acceleration of 9.8 m/s² (1 g) to IEC/EN 61800-5-1 (Test Fc of IEC 60068-2-6)
	Operation		5.9 m/s² (0.6 g)
	Transportation (Note)		Class 2M3 (IEC/EN 60721-3-2)
	Storage		Class 1M2 (IEC/EN 60721-3-1)
Pollution degree			2
IP rating			Except terminal block IP20 (IEC/EN 60529) and fan finger guard
			Open type (UL 50)
Altitude	Operation, storage		Max. 1000 m above sea level
	Transportation		Max. 10000 m above sea level

Note. In regular transport packaging

8.Technical data

8.1 MR-J4 servo amplifier

Item		MR-J4-10_/MR-J4-20_/MR-J4-40_/MR-J4-60_/MR-J4-70_/MR-J4W2-22B/MR-J4W2-44B/MR-J4W3-222B/MR-J4W3-444B	MR-J4-100_/MR-J4-200_/MR-J4-350_/MR-J4-500_/MR-J4-700_/MR-J4W2-1010B/MR-J4-11K_/MR-J4-15K_/MR-J4-22K_
Power supply	Main circuit (line voltage)	3-phase or 1-phase 200 V AC to 240 V AC, 50 Hz /60 Hz	3-phase 200 V AC to 240 V AC, 50 Hz/60 Hz
	Control circuit (line voltage)	1-phase 200 V AC to 240 V AC, 50/60 Hz	
	Interface (SELV)	24 V DC, (required current capacity: MR-J4-_A_ 500 mA, MR-J4-_B_ 300 mA; MR-J4W2-_B_ 350 mA; MR-J4W3-_B_ 450 mA)	
Control method		Sine-wave PWM control, current control method	
Safety function (STO) IEC/EN 61800-5-2		EN ISO 13849-1 category 3 PL d, EN 61508 SIL 2, EN 62061 SIL CL 2, and EN 61800-5-2 SIL 2	
Mean time to dangerous failure		MTTFd ≥ 100 [years]	
Effectiveness of fault monitoring of a system or subsystem		DC = 90 [%]	
Average probability of dangerous failures per hour		PFH = 1.68×10^{-10} [1/h]	
Mission time		T_M = 20 [years]	
Response performance		8 ms or less (STO input off → energy shut off)	
Pollution degree		2 (IEC/EN 60664-1)	
Overvoltage category		III (IEC/EN 60664-1)	
Protection class		I (IEC/EN 61800-5-1)	
Short-circuit current rating (SCCR)		100 kA	

8.2 Servo amplifier dimensions



Servo amplifier	Variable dimension table [mm]				Mass [kg]
	W	H	D		
MR-J4-10_/MR-J4-20_	40	168	135		0.8
MR-J4-40_/MR-J4-60_	40	168	170		1.0
MR-J4-70_/MR-J4-100_	60	168	185		1.4
MR-J4-200_	90	168	195		2.1
MR-J4-350_	90	168	195		2.3
MR-J4-500_	105	250	200		4.0
MR-J4-700_	172	300	200		6.2
MR-J4-11K_/MR-J4-15K_	220	400	260		13.4
MR-J4-22K_	260	400	260		18.2
MR-J4W2-22B/MR-J4W2-44B	60	168	195		1.4
MR-J4W2-77B/MR-J4W2-1010B	85	168	195		2.3
MR-J4W3-222B/MR-J4W3-444B	85	168	195		2.3

8.3 Mounting hole



Servo amplifier	Variable dimensions [mm]							Screw size
	a	a1	b	c	d	d1	e	
MR-J4-10_/MR-J4-20_/MR-J4-40_/MR-J4-60_	6	6	156 ± 0.5	6				M5
MR-J4-70_/MR-J4-100_	12	12	156 ± 0.5	6	42 ± 0.3			M5
MR-J4-200_/MR-J4-350_	6	45	156 ± 0.5	6	78 ± 0.3			M5
MR-J4-500_	6	6	235 ± 0.5	7.5	93 ± 0.3	93 ± 0.3		M5
MR-J4-700_	6	6	285 ± 0.5	7.5	160 ± 0.5	160 ± 0.5		M5
MR-J4-11K_/MR-J4-15K_	12	12	380 ± 0.5	10	196 ± 0.5	196 ± 0.5		M5
MR-J4-22K_	12	12	376 ± 0.5	12	236 ± 0.5	236 ± 0.5		M10
MR-J4W2-22B/MR-J4W2-44B	6	6	156 ± 0.5	6				M5
MR-J4W2-77B/MR-J4W2-1010B	6	6	156 ± 0.5